 


FLEXi

Keypad SK-LCD button – Brief User Guide

Keypad overview

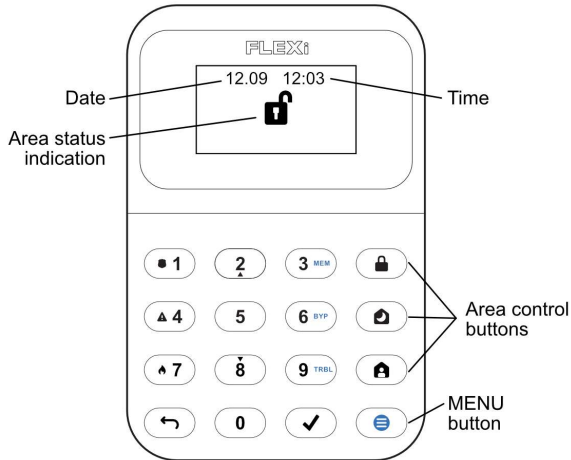

Alarm system arming / disarming

Alarm system ARM:

1. Make sure all zones are not violated.
2. Press the [🔒] button.
3. Enter User code.
4. Select the button of area to be activated.
5. Press [✓] button.
6. Exit the premises within time delayed.

When the system is armed, the ¹🔒 icon will light up.

Alarm system DISARM:

1. Enter User code.
2. Press the button of particular area you wish to disarm.
3. Press [✓] button.

When the alarm is disarmed the ⁴🔒 icon must be illuminated.

SLEEP mode activation:

(Premises perimeter is secured. Movement inside is allowed. If you open the entrance door, the alarm will actuate immediately):

1. Press [🚪] button.
2. Enter User code.
3. Press the button of area to be activated.
4. Press [✓] button.
5. SLEEP mode will turn on immediately, without exit delay.

The ³🚪 icon will illuminate when SLEEP mode is on.

STAY mode activation:

(Premises perimeter is secured. Movement inside is allowed. Any opening of entrance door enables time delay during which you have to disarm the alarm):

1. Press [🏠] button.
2. Enter User code.
3. Press the button of area to be activated.
4. Press [✓] button.
5. STAY mode will turn on immediately, without exit delay.

The ²🏠 icon will illuminate when STAY mode is on.

For area status changing into the opposite one it is sufficient to enter User code and select the preferred area. To delete symbols or command entered, press button [↶].

Emergency buttons

To send emergency message to your security service:

- **Police** – hold [1] button pressed for 3 sec.
- **Medical Aid** – hold [4] button pressed for 3 sec.
- **Fire Service** – hold [7] button pressed for 3 sec.

Illumination brightness and indication sound adjustment

Brightness of the keypad buttons

1. Press [☹] button, then [5] [3].
2. Select the preferred brightness of the keypad button backlight using the [2] and [8] buttons.
3. Press [✓] to save the new value.

The brightness of the LCD display

4. Press [☹] button, then [5] [2].
5. Select the preferred illumination brightness of zone indication using [2] and [8] buttons.
6. Press [✓] to save the new value.

Keypad keystroke volume

7. Press [☹] button, then [5] [1].
8. Select the preferred sound indication level using [2] and [8] buttons.
9. Press [✓] to save the new value.

Note: Turn off keypad lighting in standby mode. Pressing [☹] and then press [5] [4]. Switch the keypad indicator backlight status in standby mode by pressing [1] (backlight on) or [2] (backlight off). Press [✓] to save the new value.

Entering or changing User or Master codes

To enter a new or change the existing User code:

1. Press [☹] button, then [0].
2. Enter **Master** code, default code – 1234.
3. Enter User's double-digit sequence number, e.g., [02].

Note. Sequence number of **Master** code - [01].

4. Enter a new User code twice.
5. Press the sequence numbers of areas which should be controlled by User.
6. Press [✓] button. Press the [↶] button to exit.

Fire (smoke) detector reset

To reset fire (smoke) detectors:

- Hold button [↶] pressed for 3 seconds.
- Note.** Fire (smoke) detectors do not reset automatically after fire emergency detection. They can be reset only manually.

Temporary zone monitoring deactivation (BYPASS function)

BYPASS function activation:

1. Press [☹] button, then [6].
2. Enter the alarm control code.
3. Enter a double-digit sequence number of a particular zone to disable its monitoring. To disable the monitoring of several zones, enter double-digit numbers of such several zones.
4. Press [✓] button. The icon [🔒] will appear on the LCD screen.

BYPASS function deactivation:

Repeat the same actions as in deactivation of particular zone monitoring.









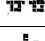











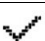



Deleting User codes

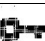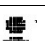



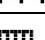

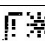
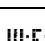
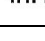


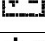










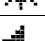

To delete User code:

1. Press [☹] button, then [0].
2. Enter **Master** code.
3. Enter User's double-digit sequence number, e.g., [02].
4. Press [🔒] keypad button. A sound signal will be heard.
5. Press [✓] button to exit.

The keypad "SK-LCD button" for alarm system control displays the states of **64 zones and 8 partitions**. Also, the "SK-LCD button" keypad can be assigned to control one or more desired areas (control panel firmware version from FW: SP3_xxx4_0121). The keypad will display the statuses of the assigned area and area zones.

Graphic symbols

Symbol	Description
	Control panel not connected
	Partition 1 Armed
	Partition 4 Disarmed
	Partition 2 Stay
	Partition 3 Sleep
	MENU button
	ENTER button
	Partition
	Alarm
	Fire
	User code
	User
	Enter/Exit
	Zone open
	Bypass
	Memory
	Trouble
	System trouble (general)
	AC power trouble
	Battery trouble
	AUX overcurrent
	Time not set
	Bell overcurrent
	Bell missing

Symbol	Description
	Fire loop trouble
	Network trouble (general)
	CMS 1 (2) trouble
	Cloud trouble
	SIM card trouble
	SIM card password trouble
	SIM card network trouble
	WiFi trouble
	RS485 interface trouble
	SIM card 2 trouble
	LAN trouble
	Wireless low battery
	Power trouble
	Bell trouble
	Tamper trouble
	Antimasking trouble
	Wireless trouble
	Expander module trouble
	Settings
	Volume
	LCD brightness
	Keypad brightness
	Standby light On/Off
	Info