


FLEXi

Keypad SK-LCD TouchPad – Brief User Guide

Keypad overview

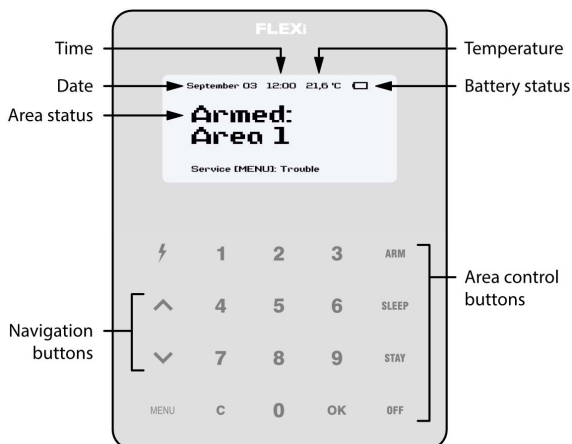

Alarm system Arming / Disarming

Alarm system ARM:

Make sure all areas are not damaged.

1. Press **[ARM]** button.
2. Enter **[User Code]**.
 - a. If the system has only one partition, skip steps 3 and 4.
3. Press the button of area to be activated.
4. Confirm your selection by pressing the **[OK]** button.
5. Exit the premises during the **Exit Delay** timeout. During the **Exit Delay** countdown, the time for the exit will be displayed on the keypad, and the text will appear on the keypad when the arming mode is activated: **Armed: Area**.

Alarm system DISARM:

1. Press **[OFF]** button.
2. Enter **[User Code]**.
 - a. If the system has only one partition, skip steps 3 and 4.
3. Press the buttons with the area numbers you want to control.
4. Confirm your selection by pressing the **[OK]** button.
 - a. When the arming mode is off, the following text will appear on the keypad display: **Disarmed: Area**.

SLEEP mode activation:

(Premises perimeter is secured. Movement inside is allowed. If you open the entrance door, the alarm will actuate immediately):

1. Press **[SLEEP]** button.
2. Enter **[User Code]**.
 - a. If the system has only one partition, skip steps 3 and 4.
3. Press the button of area to be activated.
4. Confirm your selection by pressing the **[OK]** button.
5. SLEEP mode will turn on immediately, without exit delay.
6. The following text will appear on the keypad screen: **Sleep: Area**.

STAY mode activation:

(Premises perimeter is secured. Movement inside is allowed. Any opening of entrance door enables time delay during which you have to disarm the alarm):

1. Press **[STAY]** button.
2. Enter **[User Code]**.
 - a. If the system has only one partition, skip steps 3 and 4.
3. Press the button of area to be activated.
4. Confirm your selection by pressing the **[OK]** button.
5. STAY mode will turn on immediately, without exit delay.
6. The following text will appear on the keypad screen: **Stay: Area**.

For area status changing into the opposite one it is sufficient to enter User code and select the preferred area.
To delete symbols or command entered, press button [C].

Emergency buttons

To send emergency message to your security service:

- **Panic** – hold [1] button pressed for 3 sec.
- **Medical Aid** – hold [4] button pressed for 3 sec.
- **Fire Service** – hold [7] button pressed for 3 sec.

Illumination brightness and indication sound adjustment

To adjust keypad illumination brightness and indication sound:

1. Press [MENU] button.
2. Press [5] button.
3. Press the [2] button to adjust the volume and use the [^] [v] buttons to set the desired volume. Confirm your selection by pressing the [OK] button.
4. Press the [4] button to adjust the screen brightness. Use the [^] [v] buttons to adjust the desired screen brightness. Confirm your selection by pressing the [OK] button.
5. Press the [3] button to adjust the button brightness. Use the [^] [v] buttons to set the desired button brightness. Confirm your selection by pressing the [OK] button.

Entering or changing User or Master codes

To enter a new or change the existing User code:

1. Press [⚡] button.
2. Enter [Administrator Code] (default code: 123456).
3. Enter User's double-digit sequence number, e.g., [02].
4. Enter the 4-digit [User Code].
5. Re-enter the 4-digit [User Code].
6. Press the sequence numbers of areas which should be controlled by User.
7. Confirm your selection by pressing the [OK] button.
8. Press the [C] button to exit the mode.

Two-wire fire (smoke) detector reset

To reset two-wire fire (smoke) detectors:

- Hold button [⚡] pressed for 3 seconds.
- Note.** Two-wire fire detectors do not reset automatically after fire emergency detection. They can be reset only manually.

Temporary zone monitoring deactivation (BYPASS function)

BYPASS function activation:

1. Press [MENU] button.
2. Press [3] button.
3. Enter [User Code].
4. Enter a double-digit sequence number of a particular zone to disable its monitoring. To disable the monitoring of several zones, enter double-digit numbers of such several zones.
5. Confirm your selection by pressing the [OK] button.
6. The keypad will exit zone bypassing mode.

BYPASS function deactivation:

Repeat the same actions as in deactivation of particular zone monitoring.

Deleting User codes

To delete User code:

1. Press [⚡] button.
2. Enter [Administrator Code] (default code: 123456).
3. Enter User's double-digit sequence number, e.g., [02].
4. Press [SLEEP] button.
5. Press [C] button to exit the mode.

The keypad SK-LCD TouchPad for alarm system control displays the states of 64 zones and 8 partitions. Also, the SK-LCD TouchPad keypad can be assigned to control one or more desired areas (keypad firmware version from FW:1.41, control panel firmware version from FW:SP3_XXX4_0119. The keypad firmware version can be seen by pressing [MENU] [5] [0].). The keypad will display the statuses of the assigned area and area zones.