


FLEXi

Keypad SK-LED button – Brief User Guide

Keypad overview

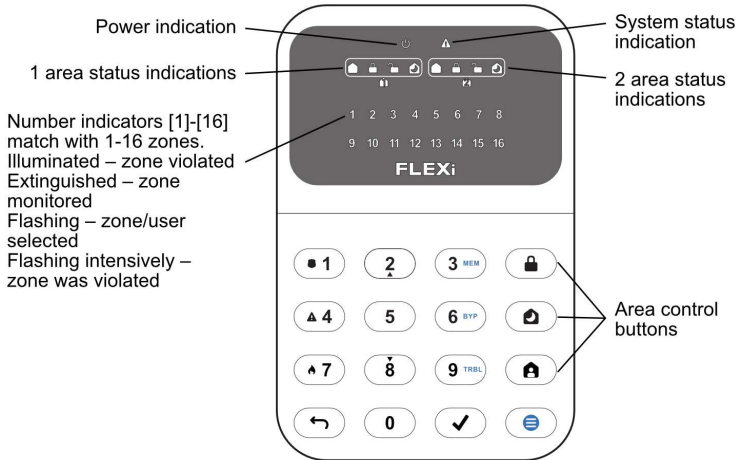

Alarm system arming / disarming

Alarm system ARM:

1. Make sure all zones are not violated (none of zone indicators are illuminated).
2. Press the [🔒] button.
3. Enter User code.
4. Select the button of area to be activated.
5. Press [✓] button.
6. Exit the premises within time delayed.

Once the code is entered the 🔒 indicator will flash for duration of exit time delay. When the system is armed, the 🔒 indicator will light up.

Alarm system DISARM:

1. Enter User code.
2. Press the button of particular area you wish to disarm.
3. Press [✓] button.

When the alarm is disarmed the 🔒 indicator must be illuminated.

SLEEP mode activation:

(Premises perimeter is secured. Movement inside is allowed. If you open the entrance door, the alarm will actuate immediately):

1. Press [🔒] button.
2. Enter User code.
3. Press the button of area to be activated.
4. Press [✓] button.
5. SLEEP mode will turn on immediately, without exit delay.

The 🔒 indicator will illuminate when SLEEP mode is on.

STAY mode activation:

(Premises perimeter is secured. Movement inside is allowed. Any opening of entrance door enables time delay during which you have to disarm the alarm):

1. Press [🔒] button.
2. Enter User code.
3. Press the button of area to be activated.
4. Press [✓] button.
5. STAY mode will turn on immediately, without exit delay.

The 🔒 indicator will illuminate when STAY mode is on.

For area status changing into the opposite one it is sufficient to enter User code and select the preferred area. To delete symbols or command entered, press button [↶].

Emergency buttons

To send emergency message to your security service:

- **Police** – hold [1] button pressed for 3 sec.
- **Medical Aid** – hold [4] button pressed for 3 sec.
- **Fire Service** – hold [7] button pressed for 3 sec.

Illumination brightness and indication sound adjustment

Brightness of the keypad buttons

1. Press [☹] button, then [1].
2. Select the preferred brightness of the keypad button backlight using the [2] and [8] buttons.
3. Press [✓] to save the new value. Press the [↶] button to exit.

The brightness of the zone LED indication

4. Press [☹] button, then [4].
5. Select the preferred illumination brightness of zone indication using [2] and [8] buttons.
6. Press [✓] to save the new value. Press the [↶] button to exit.

Keypad keystroke volume

7. Press [☹] button, then [7].
8. Select the preferred sound indication level using [2] and [8] buttons.
9. Press [✓] to save the new value. Press the [↶] button to exit.

Note: Turn off keypad lighting in standby mode.

Pressing [☹] followed by [5] toggles the backlight states of the keypad indicators in standby mode. Press [✓] to save the new value. Press the [↶] button to exit.

Entering or changing User or Master codes

To enter a new or change the existing User code:

1. Press [☹] button, then [0].
2. Enter *Master* code, default code – 1234.
3. Enter User's double-digit sequence number, e.g., [02].

Note. Sequence number of *Master* code - [01].

4. Enter a new User code twice.
5. Press the sequence numbers of areas which should be controlled by User.
6. Press [✓] button. Press the [↶] button to exit.

The keypad “SK-LED button” for alarm system control displays the states of 16 zones and 2 partitions. Also, the “SK-LED button” keypad can be assigned to control one or two desired areas (keypad firmware version from FW:1.0, control panel firmware version from FW:SP3_xxx4_0120). The keypad will display the statuses of the assigned area and area zones.

Fire (smoke) detector reset

To reset fire (smoke) detectors:

- Hold button [↶] pressed for 3 seconds.
- Note.** Fire (smoke) detectors do not reset automatically after fire emergency detection. They can be reset only manually.

Temporary zone monitoring deactivation (BYPASS function)

BYPASS function activation:

1. Press [☹] button, then [6].
2. Enter the alarm control code. The [▲] indicator starts flashing green.
3. Enter a double-digit sequence number of a particular zone to disable its monitoring. To disable the monitoring of several zones, enter double-digit numbers of such several zones.
4. Press [✓] button. The [▲] indicator starts illuminating green.

BYPASS function deactivation:

Repeat the same actions as in deactivation of particular zone monitoring.

Deleting User codes

To delete User code:

1. Press [☹] button, then [0].
2. Enter *Master* code.
3. Enter User's double-digit sequence number, e.g., [02].
4. Press [☹] keypad button. A sound signal will be heard and the button, indicating the sequence number of User, whose code was deleted from memory, will extinguish.
5. Press [✓] button. Press the [↶] button to exit.